

## Quick reference guide

For complete instructions, please refer to the manual provided with your EP5962 telephone.

### Softkeys

Press a softkey to select an item displayed just above the key.

### L1/Flash, L2/Flash

Press **LINE 1** to make or answer a call on line 1.

Press **LINE 2** to make or answer a call on line 2.

During a call, press **FLASH** to receive an incoming call, if Call Waiting is activated or use for other features requiring **FLASH**.

### Speaker

Press to activate handset speakerphone. Press again to switch to normal handset use (earpiece).

### Off/Clear

During a call, press to hang up.


While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

### Xfer/Intercom

Press to transfer a call or initiate an intercom conversation.

### Volume

Press to adjust voice volume or control the handset ringer volume while ringing.

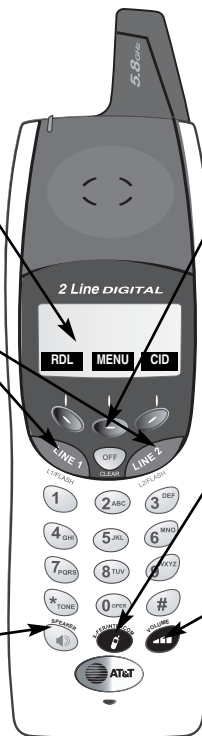

## Screens

