

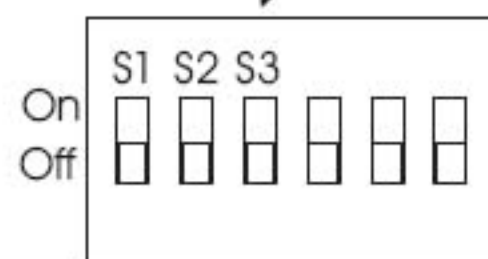


The TE110DS is a relay contact that can be activated by the TE110 when the homeowner dials the appropriate touch tone code from any of the house telephones. See diagram for details.

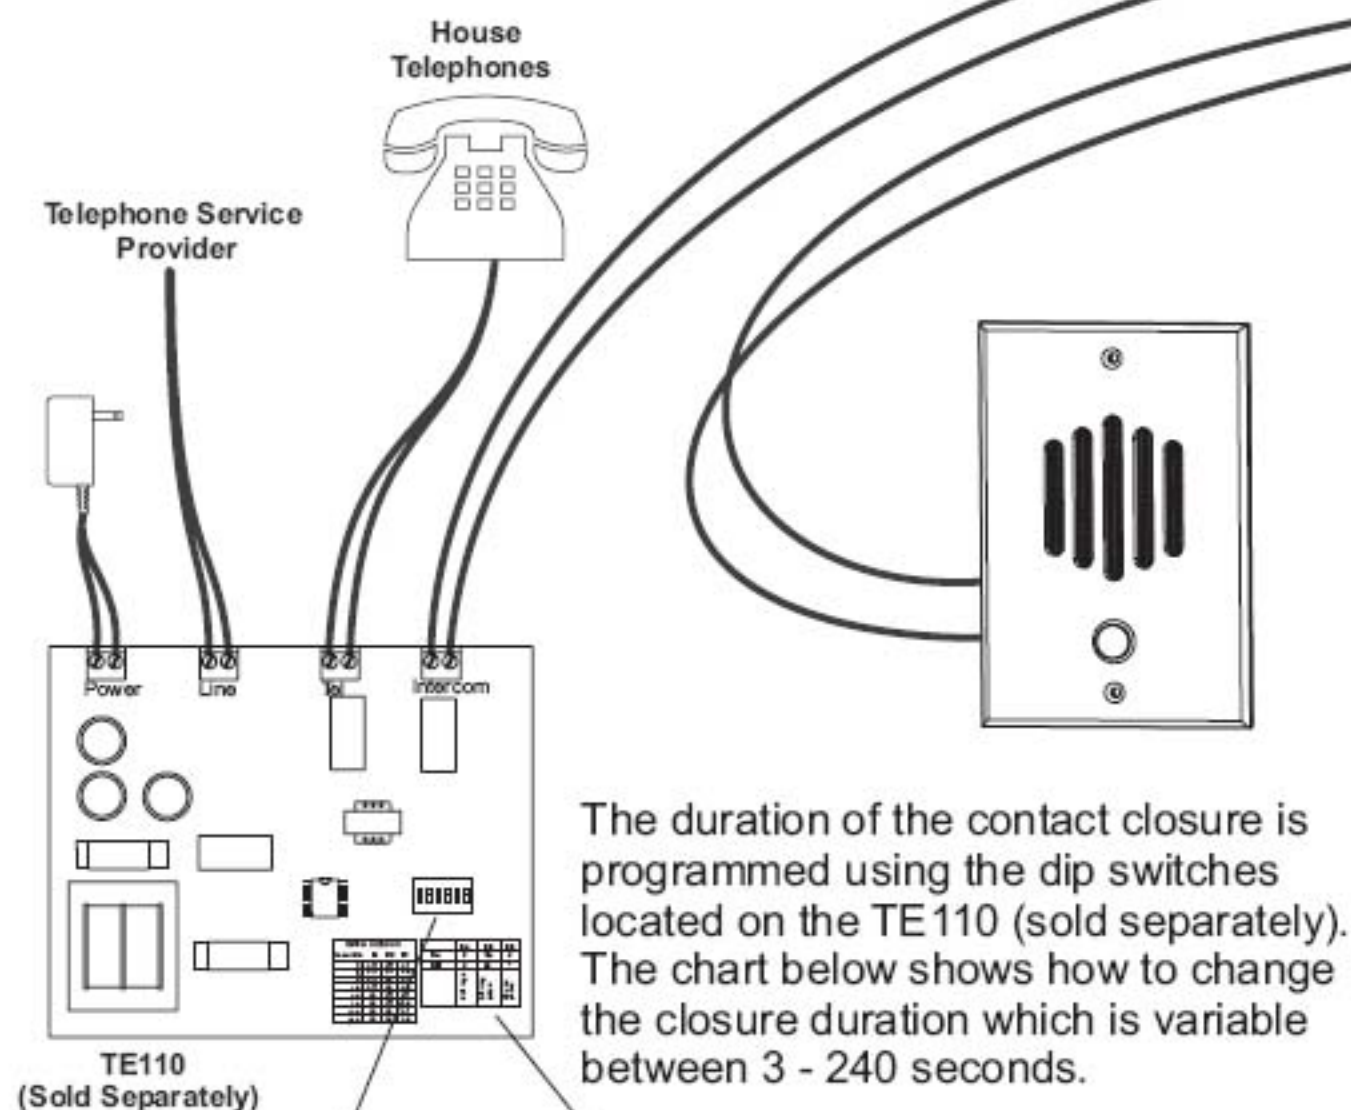

Strike duration			
Seconds	S1	S2	S3
3	off	off	off
5	off	off	on
8	off	on	off
15	off	on	on
20	on	off	off
40	on	off	on
120	on	on	off
240	on	on	on

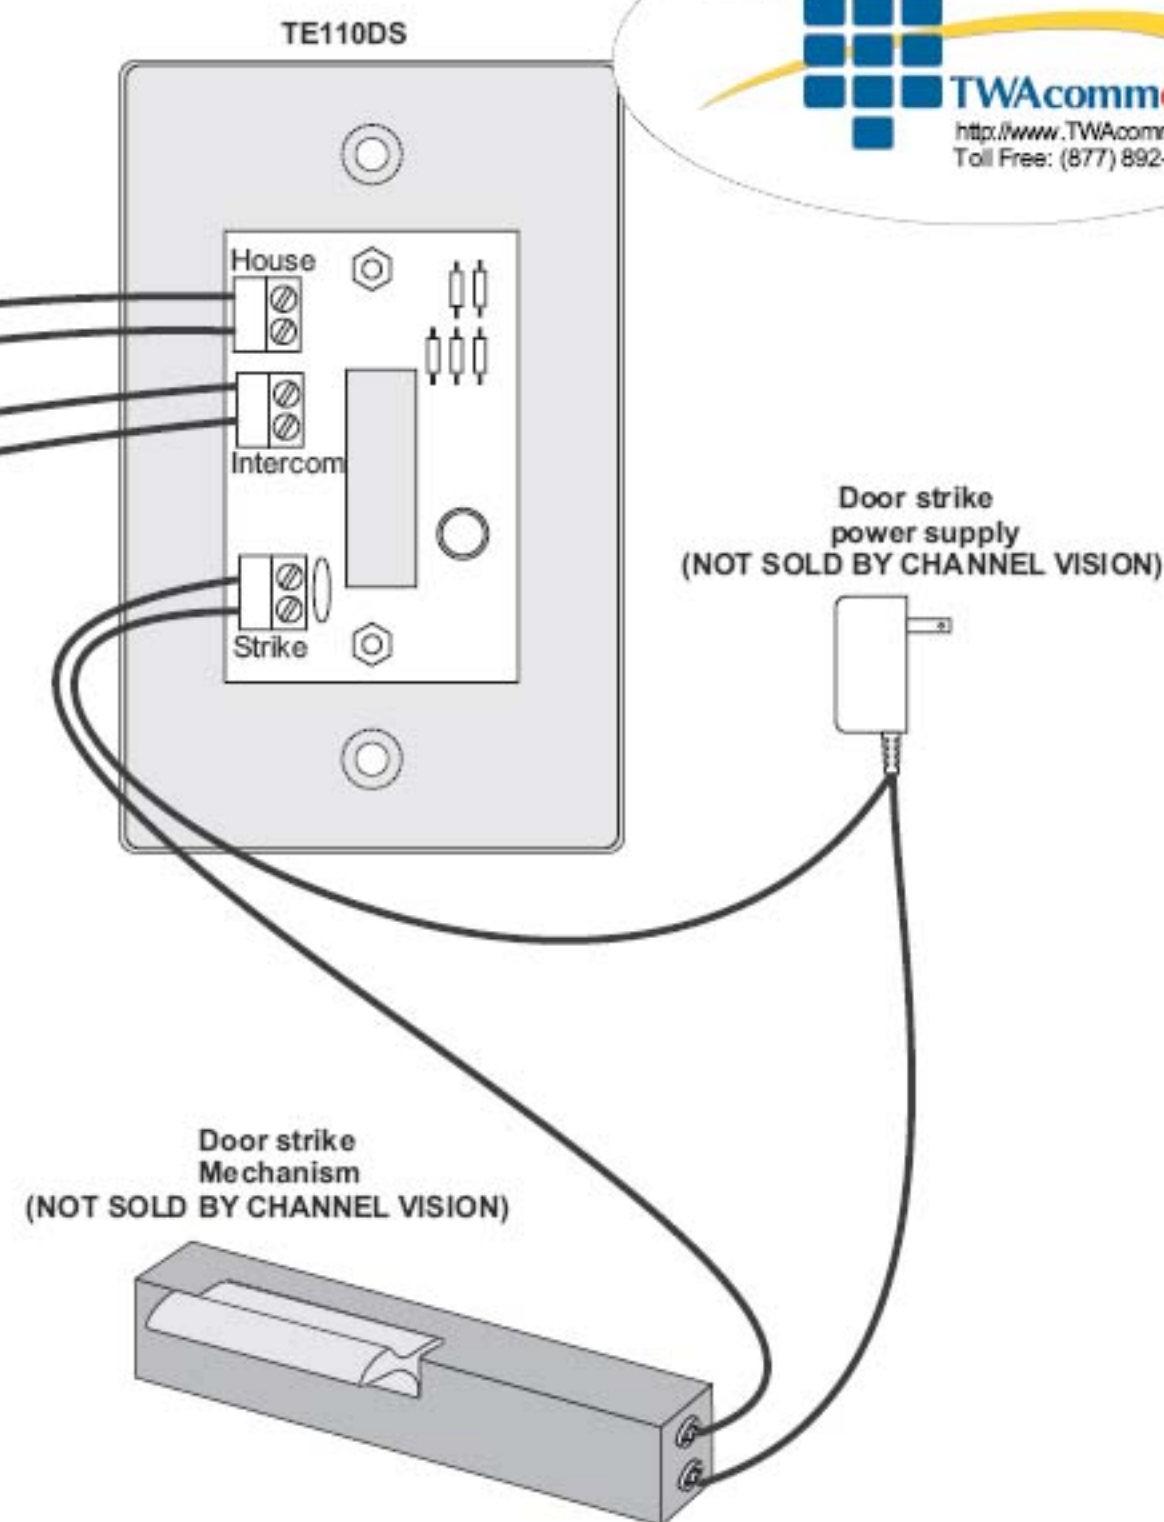

Basic Operation:

To close the door strike relay while you are already communicating with the door speaker, press #7 (or *7).

To close the door strike relay when you are not communicating with the door speaker, press ## (or **) and then press #7 (or *7).