OPTICOM® Trays, Drawers and Preloaded Trays



specifications

Trays, drawers and pre-loaded trays shall be constructed of steel material. Drawers shall have built-in bend radius control clips. Trays and drawers shall have removable top cover to provide easy access to splices and cable storage. Pre-loaded trays shall have a removable patch panel to allow for rear access from front of unit.



technical information

Dimensions:	FMT1:	19.00"W x 1.77"H x 11.16"D (482.60mm x 44.9mm x 283.4mm), 1 RU
	FMT2:	19.00"W x 3.48"H x 11.16"D (482.60mm x 88.3mm x 283.4mm), 2 RU
	FMD1:	19.00"W x 1.77"H x 15.33"D (482.60mm x 44.9mm x 389.5mm), 1 RU
	FMD2:	19.00"W x 3.48"H x 15.40"D (482.60mm x 88.3mm x 391.2mm), 2 RU
	FT1W12DSC:	19.00"W x 1.73"H x 8.01"D (482.60mm x 43.9mm x 203.4mm), 1 RU
	FT1W12ST:	19.00"W x 1.73"H x 8.01"D (482.60mm x 43.9mm x 203.4mm), 1 RU
	FT1W24ST:	19.00"W x 1.73"H x 8.01"D (482.60mm x 43.9mm x 203.4mm), 1 RU
	FT124MC:	19.00"W x 1.73"H x 8.01"D (482.60mm x 43.9mm x 203.4mm), 1 RU

key features and benefits

Trays and drawers:			
Side and rear cable entry	Provides installer with several options to route cable within the rack		
Removable rear tray cover	Provides easy access to splices and cable storage		
Patch panel mounting	Hardware provided to allow patch panel to be preassembled to unit before mounting to rack		
Trays:			
Modular design	Versatility to accept 24 port MINI-COM® faceplate, all metal modular patch panel or fiber adapter patch panels		
Preloaded trays:			
Mounting options	Mounts flush on 19" or 23" racks; also mounts 2.0" recessed on 19" racks or cabinets		
Removable patch panel	Allows for rear access from front of unit		

applications

PANDUIT® OPTICOM® Trays, Drawers and Preloaded Trays are designed to manage and organize fiber distribution in areas where space is limited. They can also be used to manage cable from outside the facility. Enclosures can be used as an interconnect or

cross-connect in any telecommunications room and can use any standard FAP or FMP series adapter panel. *OPTICOM®* Trays and Drawers are completely modular and can manage both fiber and copper cables.

Ортісом® Trays

Up to 48 fibers: FMT1
Up to 96 fibers: FMT2

OPTICOM® Drawers

Up to 48 fibers: FMD1
Up to 96 fibers: FMD2

Ортісом® Preloaded Trays

12 duplex SC: FT1W12DSC12 ST bronze: FT1W12ST24 ST bronze: FT1W24ST

24 MINI-COM®

openings: FT124MC

Adapter Panels

6 FJ: FMP6 FAPB

ST Adapter Panels

6 ST: FAP6WST **8 ST:** FAP8WST

SC Adapter Panels

6 simplex SC: FAP6WBUSC
3 duplex SC: FAP3WBUDSC
6 duplex SC: FAP6WBUDSC

Ортісом® Patch/Splice Kits

Splice tray: FST24S (accepts up to 24 mechanical or fusion splices)

Inlice

Splice

tray holder: FSTHED (accepts up to 4 FST24S splice trays)

Fiber Adapter Patch Panel

For use

with FMT1: CFAPPBL1


For use

with FMT2: CFAPPBL2



OPTICOM® Trays, Drawers and Preloaded Trays



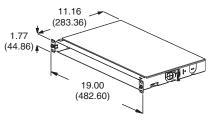



(283.36)3.48 (88.29)19.00 (482.60)

11.16

FMT1


FMT2

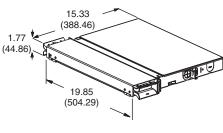


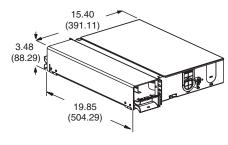

FMD1


FMD2

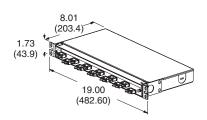


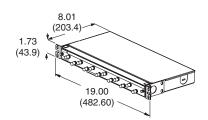

FT1W12DSC

FT1W12ST

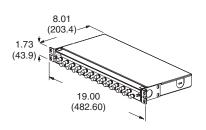

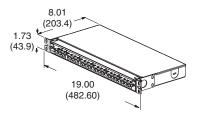

FT1W24ST

FT124MC

Dimensions are in inches (Dimensions in parentheses are metric)

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT CANADA Markham, Ontario cs-cdn@panduit.com Phone: 800.777.3300

PANDUIT EUROPE LTD. London, UK cs-emea@panduit.com Phone: 44.20.8601.7200

PANDUIT SINGAPORE PTE. LTD. Republic of Singapore cs-ap@panduit.com Phone: 65.6379.6700

PANDUIT JAPAN Tokyo, Japan cs-japan@panduit.com Phone: 81.3.3767.7011 PANDUIT LATIN AMERICA Jalisco, Mexico cs-la@panduit.com Phone: 52.333.666.2501

PANDUIT AUSTRALIA PTY. LTD. Victoria, Australia cs-aus@panduit.com Phone: 61.3.9794.9020

For a copy of PANDUIT product warranties, log on to www.panduit.com/warranty

