



Seamless Hubbell System Integration.

Universal Keystone Design fits into all Hubbell Products.

PS/2 6-pin DIN Keyboard and Mouse Signal.

Feed-thru Couplers.

**SPECIFICATIONS**

- ◆ **Connector:**  
Connector Body: Shell: Brass.  
Body: Plastic  
Nickel-plated: 100μ"
  - Pin: Brass, Nickel-plated
- ◆ **Performance:**  
Mating Cycles: 500+
- ◆ **Material:**  
Housing: Flame-retardant  
Polymer UL 94V-0
- ◆ **Signal Transmitted:**  
Serial data at 10 to 16KHz with 1 stop bit,  
1 start bit, 1 parity bit (odd).

**CABLE TERMINATION**

**Cable Type:**

Male 6-pin DIN patch cord.  
Standard PS/2 keyboard/mouse connections.

**CONNECTOR TERM**

**PS/2 (6-pin DIN) Connector:** The 6-pin DIN PS/2 connector is used for connecting a keyboard and a mouse to a PC device. The PS/2 mouse connector generally replaced the older RS-232 "serial mouse" connector. PS/2 was developed in 1987 from the IBM Personal System/2 series computers.

The keyboard and mouse interfaces are electrically similar with the main difference being that open collector outputs are required on both ends of the keyboard interface to allow bidirectional communication. The color-coded PS/2 connection ports (purple for keyboards and green for mice).

**HUBBELL iStation AV Connectors, PS/2 6-Pin DIN Coupler**

Plug 'n Play-style termination.

KVM applications.



High impact, flame-retardant Polymer.

Deliver keyboard and mouse at the work area.

Hubbell's **iSTATION™** PS/2 couplers provide easy access for serial data transmissions to the work station. The PS/2 couplers utilize standard 6-pin DIN connectors for point of attachment. Terminate the PS/2 coupler with a male 6-pin pre-terminated cord attached to a keyboard, mouse, patch cord or field attachable plug customized in the field.

Requiring no soldering, these connectors install with a snap into any **iSTATION™** product, module, frame, surface housing, poke-through, raceway, delivery or even a UDX multimedia panel to distribute serial data transmissions.

Create a customized multimedia work station by adding a PS/2 coupler connector along with Hubbell's extensive line of AV connectors, loaded modules and **XCELERATOR™** jacks.

**APPLICATIONS SUPPORTED**

- Keyboard, mouse, laptops and desktop computers.
- KVM, servers, and gaming machines.

 
**INSTALLATION TIPS**

**Termination:** The PS/2 coupler utilize standard male 6-pin DIN connectors, pre-terminated to a keyboard, mouse, patch cord or field attachable customized in the field.

**Important:** Always allow for clearance behind connection location to ensure for proper bend radius.

**CONNECTOR SPECIFICATIONS**

Pins	Keyboard	Mouse
1	+DATA	DATA
2	Not Connected	Not Connected*
3	Ground	Ground
4	Vcc	+5V DC at 100 mA
5	+Clock	Clock
6	Not Connected	Not Connected*

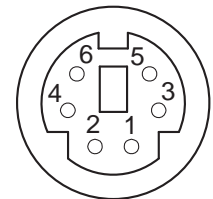

front nose view

\* Different laptops may use data for splitter cable.

\*\* Different laptops may use Clock for splitter cable.




**iSTATION™ PS/2 6-pin DIN AV Connector**



 
Applications	Housing Color	Insulator Color	Catalog No.
Mouse	Black	Purple	<b>SF6PM</b>
Keyboard	Black	Green	<b>SF6PK</b>

Color	Description
	Mouse
	Keyboard

**DIMENSIONS**

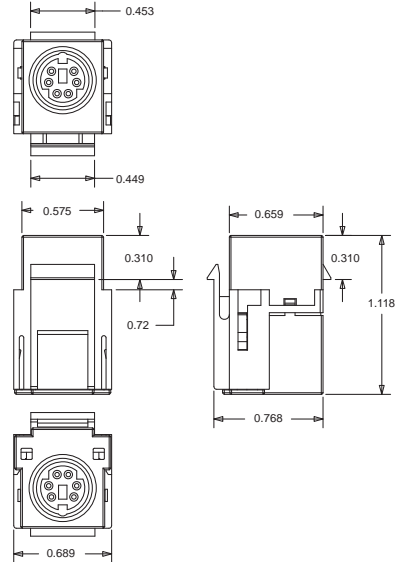

**CONNECTOR DEPTH CHART**

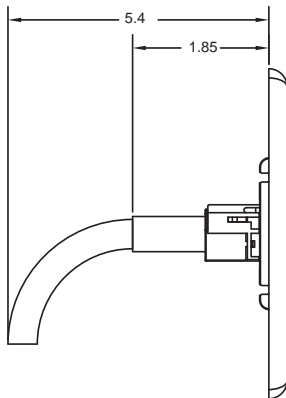 

**iSTATION™ COMPATIBLE**

**Work Station and Cross-Connect Solutions**

 
- Front and Rear-loading Plates
- Duplex and Decorator Frames
- ISM Surface Mount Boxes
- UDX Multimedia Panels (except 1U-48)
- netSELECT™: Residential Network Solution
- iFRAME™ Vertical Patch Panel

**Delivery System**

- SystemOne Poke-Throughs and Floor Boxes
- Surface Raceway, Metal and Non-Metallic
- Multi-Connect™ Wall Boxes/Conference Table Boxes
- Power Poles



**TYPICAL APPLICATION**

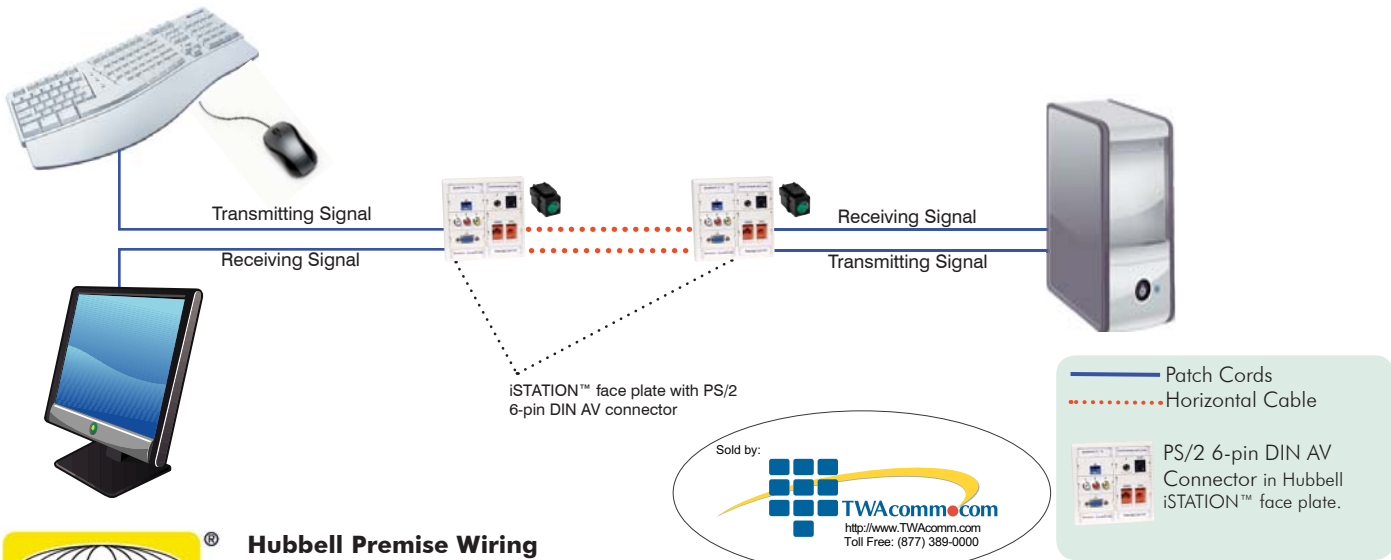

**Hubbell Premise Wiring**

HUBBELL INCORPORATED (Delaware)  
 14 Lord's Hill Road • Stonington, CT 06378-0901 • (860) 535-8326 • 800-626-0005  
 Fax: (860) 535-8328 • Internet site: <http://www.hubbell-premise.com>



— Patch Cords  
 ..... Horizontal Cable

PS/2 6-pin DIN AV Connector in Hubbell iSTATION™ face plate.

**Worldwide Locations**

Hubbell Premise Wiring, Asia Pacific	852-2836-7131	Fax: 852-2836-7132	Hubbell Premise Wiring, Latin America	305-408-4501	Fax: 305-408-8201
Hubbell Canada Inc.	905-839-1138	Fax: 905-839-9108	Hubbell de Mexico, S.A. de C.V.	(5255) 9151-9999	Fax: (5255) 9151-9989
Hubbell Premise Wiring, Central America	506-309-4158	Fax: 506-260-1616	Hubbell Premise Wiring, Middle East	971-4-393-4192	Fax: 971-4-393-4194
Hubbell Premise Wiring, China	86-21-6374 2660	Fax: 86-21-6374 2799	Hubbell Premise Wiring, Puerto Rico	787-855-1075	Fax: 787-855-3265
Hubbell Premise Wiring, Europe	44-01283 500500	Fax: 44-01283 500400	Hubbell-Taian Co., Ltd., Taiwan	886-2-2522-1862	Fax: 886-2-2522-1872
Hubbell Premise Wiring, India	91-80-4022-4089	Fax: 91-80-4022-4033	Hubbell Premise Wiring, Venezuela	58-212-5156482	Fax: 58-212-6627258
Hubbell Int'l. Inc., Korea Branch	(82 2) 2607 1363	Fax: (82 2) 2603 7386			