


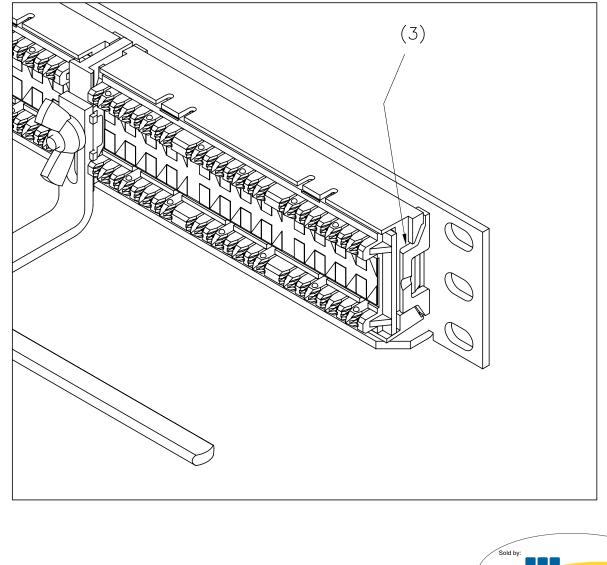

TO REMOVE MODULE:

- 1) REMOVE NEAREST WING NUT & WIRE MANAGER FROM STUD.
- 2) REMOVE WIRE MANAGER SLIDE GUIDE FROM STUD.
- 3) PUSH OUT BEZEL LOCKING TABS WITH A SMALL, FLAT SCREWDRIVER IN THE SLOT PROVIDED.
- 4) WITHDRAW MODULE FROM BEZEL LOCKING TABS.
- 5) REASSEMBLE IN REVERSE ORDER WITH REPLACEMENT MODULE.



Sold by:	
	TWAcommecom
	http://www.TWAcomm.com
	Toll Free: (877) 389-0000

INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601476	00		2 of 2	HATHAWAY	01/27/06	COLLELO	01/27/06	M.MARTICH	01/27/06