


INTERNAL ELBOW BASE -For mounting base at 90° internal corners.




INTERNAL ELBOW COVER -

2 21/32" For mounting cover and trim cover [67mm] at 90° internal corners.

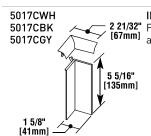

INTERNAL ELBOW WIRE GUARD -

Protects wiring at mitered internal cover: snaps into 5017B Base Elbow. Not needed when 5017C Internal Cover Elbow is used.

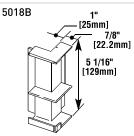


EXTERNAL BASE ELBOW -

For mounting base at 90° external corners.



PART NO. DESCRIPTION

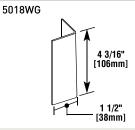

EXTERNAL ELBOW WIRE GUARD -

Installs at a mitered external elbow joint behind the covers to protect sharp objects from being inserted. Not needed when the external cover elbow is used.


5007C-1AWH DEVICE PLATE -5007C-1ABK External device cover; for mounting 5007C-1AGY one standard device and up to two communication connections. 9/16" For faceplate options, see 5507 [14.3mm] Series™ Faceplates. (For power side only.)



DEEP DEVICE PLATE -5007C-2ABBK

5 3/16"

For mounting deeper devices such as TVSS receptacles, GFCI devices, and Pass & Seymour® Activate inserts. Accepts 5507 Series™ Faceplates, 2A size Activate inserts, and Open System communication modules. Bezels [132mm] included. For faceplate options, see 5507 Series™ Faceplates.

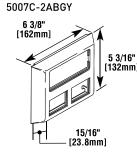

5007C-2RTWH

5007C-2RTBK

5007C-2RTGY

6 3/8" [162mm]

DEEP DEVICE PLATE -

For mounting deeper devices such as TVSS receptacles, GFCI devices, and Pass & Seymour® Activate inserts. Accepts 5507 Series" Faceplates, Ortronics® TracJack, and Series II Inserts. Bezels included. For faceplate options, see 5507 Series™ Faceplates.

