


Quick Setup Guide

For trouble-free operation and best sound quality, follow these steps:

FIRST Locate your phone type, install the batteries (included) in the rear of your amp, and set the switches on the bottom of your amp.

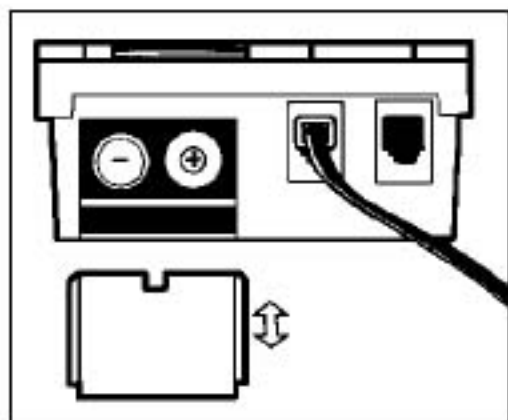


FOR MAXIMUM COMFORT AND EFFICIENCY, READ ALL THE INFORMATION PROVIDED IN THIS GUIDE BEFORE USING YOUR NEW AMPLIFIER.

Most phones




INSTALL BATTERIES

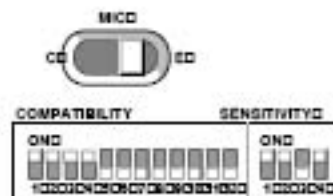

*AT&T Merlin
AT&T 7000 Series
Voice Terminals*




INSTALL BATTERIES

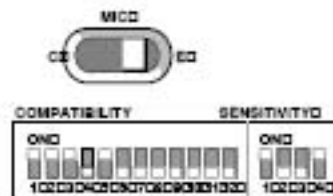

*Northern Telecom
"Centrex" Phones
Models M5009,
M5209, M5112,
M5312, M5317*




INSTALL BATTERIES

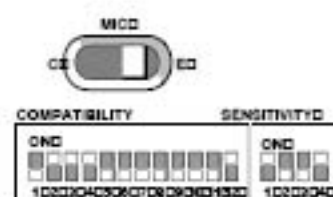

*Siemens Dyad,
Siemens Jr. Dyad,
Siemens Digit 260
Consoles*



INSTALL BATTERIES

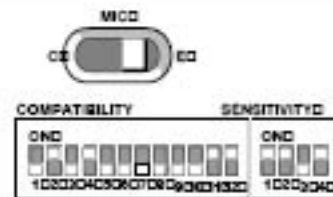

*All installations
using a PBX
two prong adapter*



BATTERIES NOT REQUIRED

