


# Quick Setup Guide

Sold by:



For trouble-free operation and best sound quality, follow these steps:

**FIRST** Locate your phone type, install the batteries (included) in the rear of your amp, and set the switches on the bottom of your amp.

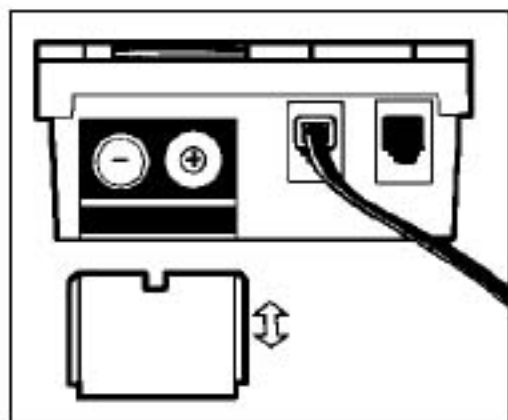


FOR MAXIMUM COMFORT AND EFFICIENCY, READ ALL THE INFORMATION PROVIDED IN THIS GUIDE BEFORE USING YOUR NEW AMPLIFIER.

*Most phones*




INSTALL BATTERIES

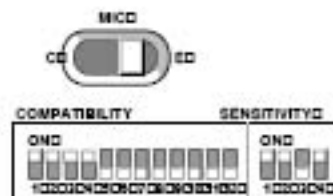

*AT&T Merlin  
AT&T 7000 Series  
Voice Terminals*




INSTALL BATTERIES

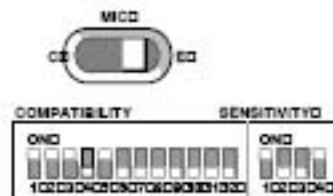

*Northern Telecom  
"Centrex" Phones  
Models M5009,  
M5209, M5112,  
M5312, M5317*




INSTALL BATTERIES

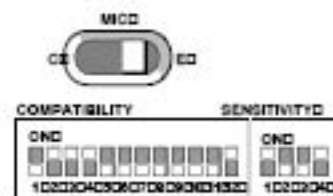

*Siemens Dyad,  
Siemens Jr. Dyad,  
Siemens Digit 260  
Consoles*



INSTALL BATTERIES

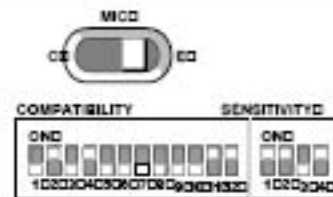

*All installations  
using a PBX  
two prong adapter*



BATTERIES NOT REQUIRED

