


Quick Setup Guide

Sold by:



For trouble-free operation and best sound quality, follow these steps:

FIRST Locate your phone type, install the batteries (included) in the rear of your amp, and set the switches on the bottom of your amp.

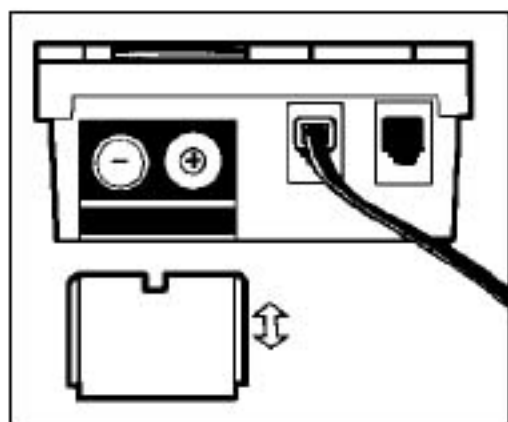


FOR MAXIMUM COMFORT
AND EFFICIENCY,
READ ALL THE INFORMATION
PROVIDED IN THIS GUIDE BEFORE
USING YOUR NEW AMPLIFIER.

Most phones




INSTALL
BATTERIES

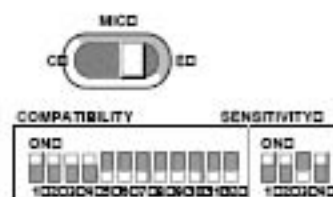

*AT&T Merlin
AT&T 7000 Series
Voice Terminals*




INSTALL
BATTERIES

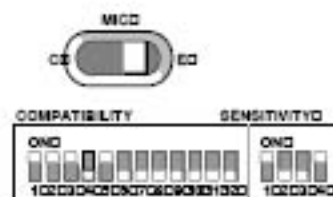

*Northern Telecom
"Centrex" Phones
Models M5009,
M5209, M5112,
M5312, M5317*




INSTALL
BATTERIES

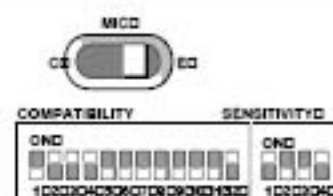

*Siemens Dyad,
Siemens Jr. Dyad,
Siemens Digit 260
Consoles*



INSTALL
BATTERIES

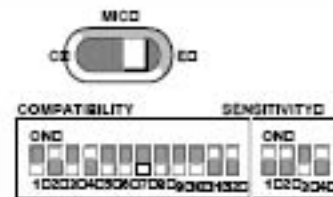

*All installations
using a PBX
two prong adapter*



BATTERIES
NOT REQUIRED

