MIGHTY MO 6 CABLE MANAGEMENT RACK

http://www.TWAcomm.com
Toll Free: (877) 389-0000

MIGHTY MO 6 CABLE MANAGEMENT SYSTEM ASSEMBLY INSTRUCTIONS

NOTE: Instruction for both 19" and 23" panels. Rack for 19" panel is shown; rack for 23" panel uses the inside mounting holes as shown on sheet 3.


STEPS:

- 1. Before assembling MIGHTY MO rack, please inventory material contents per sheet 2 and schematic inside hardware kit cover .
- 2. The MIGHTY MO uprights have EIA rack unit numerals every 5 units and can be assembled with rack unit #1 at the bottom or at the top. Insure both uprights start the same. Attach the two upright side rails to the base angles using 3/8 x 1" hex head bolts, lock washers, and speed nuts.
- 3. Attach top front waterfall and rear ladder rail to top of upright rails using 3/8 x 1" hex head bolts, lock washers and speed nuts.
- 4. Install bend limiters in slots on front waterfall and rear ladder rail. Hole in bracket installs on rear rail. Secure bracket using two #10 X 1/2" hex washer—head screws. The screws should be installed from outside of rear rail.
- 5. Install separator plate on inside of top waterfall using two #10 X 1/2" hex washer—head screws. The screws should be installed from the outside of the waterfall.
- 6. Install Hook—Loop wire management straps in vertical slots on inside uprights as required.
- 7. See sheet 4 for multiple rack configuration(s) and layout of floor mounting.
- 8. To secure rack(s) to floor, use 7/8 diameter holes provided in base of rack. The installation vendor should provide mounting hardware to secure rack to floor following local and state codes.

| 71 | 601 | 4051 |
|----|-----|------|
| | | |

B 125 EUGENE O'NEILL DRIVE NEW LONDON, CT 06320 TEL: 860-445-3800 FAX: 860-405-2990


MIGHTY MO 6 CABLE MANAGEMENT RACK

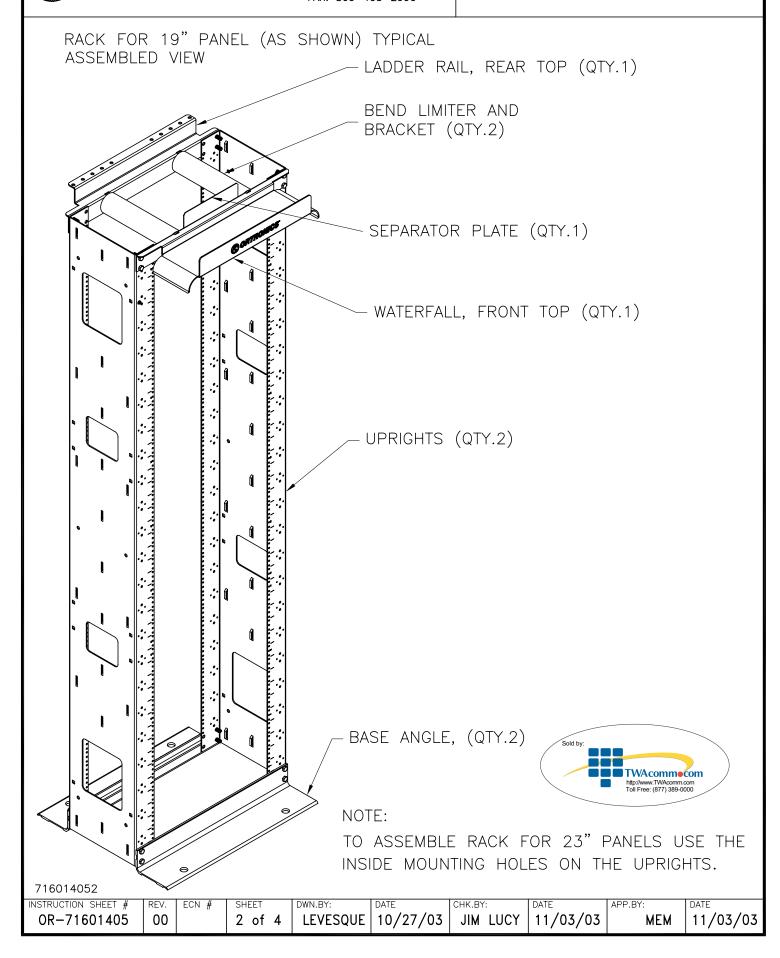



CABLE MANAGEMENT MIGHTY MO RACK

RACK FOR: 19" PANEL (SHOWN) ASSSEMBLY FIGURES

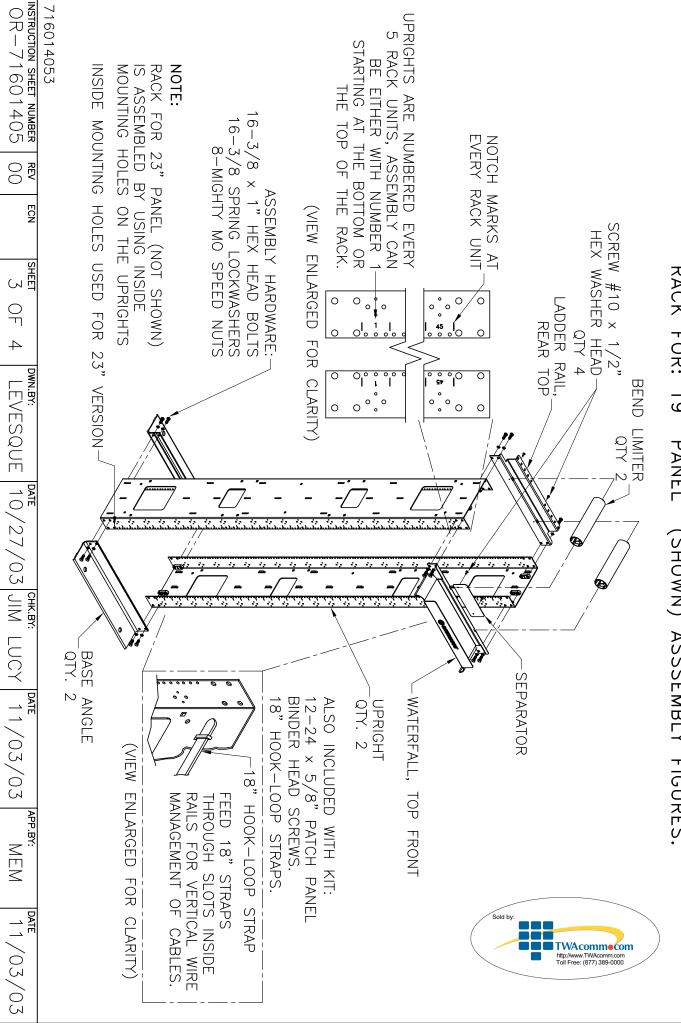

OR-71601405

9

MEM

